

QUICK START GUIDE

To start watching the TV right away you must complete the following steps :

1. Verify you have received everything
2. Attach the stand to the TV
3. Install the batteries to the remote control
4. Connect power and a cable or antenna to the TV
5. Turn on your TV and scan for channels
6. Your TV is ready for viewing
7. oCOSMO wants to help you save energy! This HDTV meets the ENERGY STAR® guidelines. The default setting for this HDTV is set to POWER SAVING mode. You can change this setting by pressing the PICTURE button on the remote control twice.

1. CE3200 Package Contents

oCOSMO TV Display x 1
TV Stand x 1
Neck x 1
User Manual x 1
Quick Start Guide x 1
Torque Screws x 7 (thick threaded) TYPE1 SCREW
Machined Screws x 2 (fine threaded) TYPE2 SCREW
Screw Driver x 1
Power Cord x 1
Warranty / Registration Card x 1
TV Remote Control (AAA Battery included) x 1

**Thick Thread
Screw**



TYPE1 SCREW

**Fine Thread
Screw**



TYPE2 SCREW

2. Attaching the TV Stand

1. Obtain 5 torque screws from the package and attach the 5 screws to the bottom of the base against the neck.



**Thick Thread
Screw**



 
TYPE1 SCREW

**Fine Thread
Screw**




TYPE2 SCREW

2. To attach the stand place the display unit flat on a table. Afterwards attach the stand onto the display and screw in the 4 screws to secure the stand.

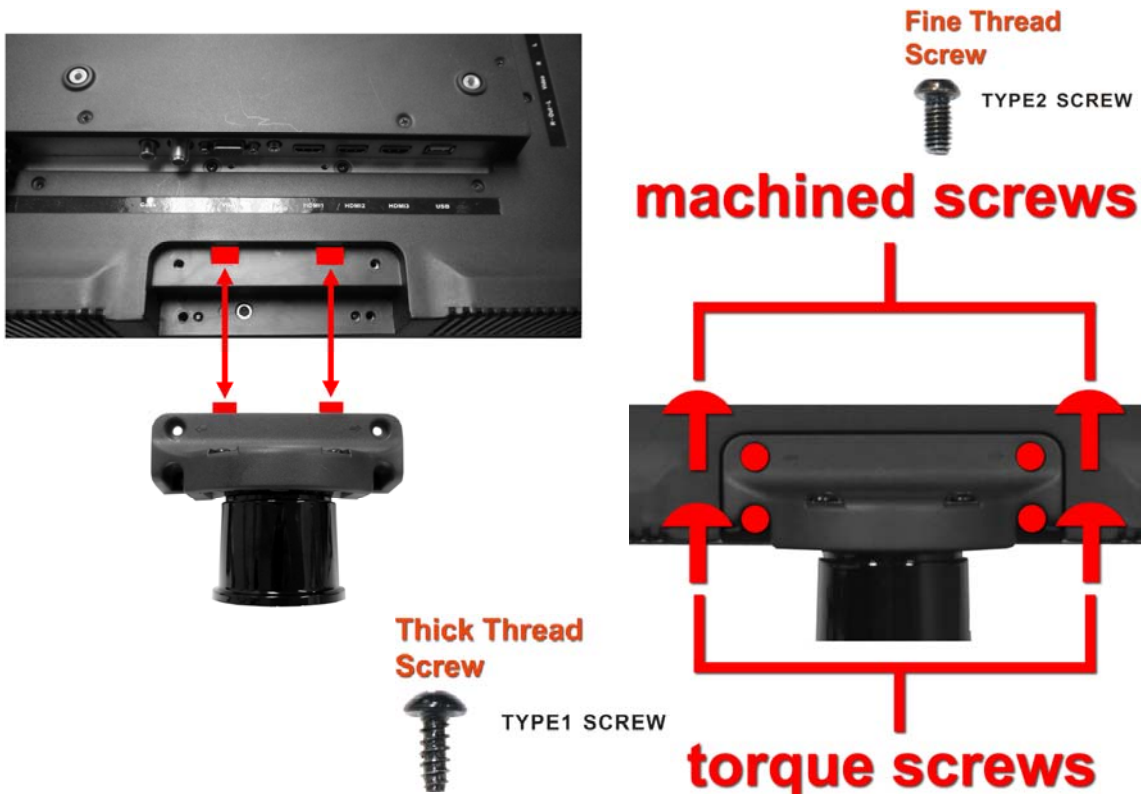

Rear View Mounting Pattern

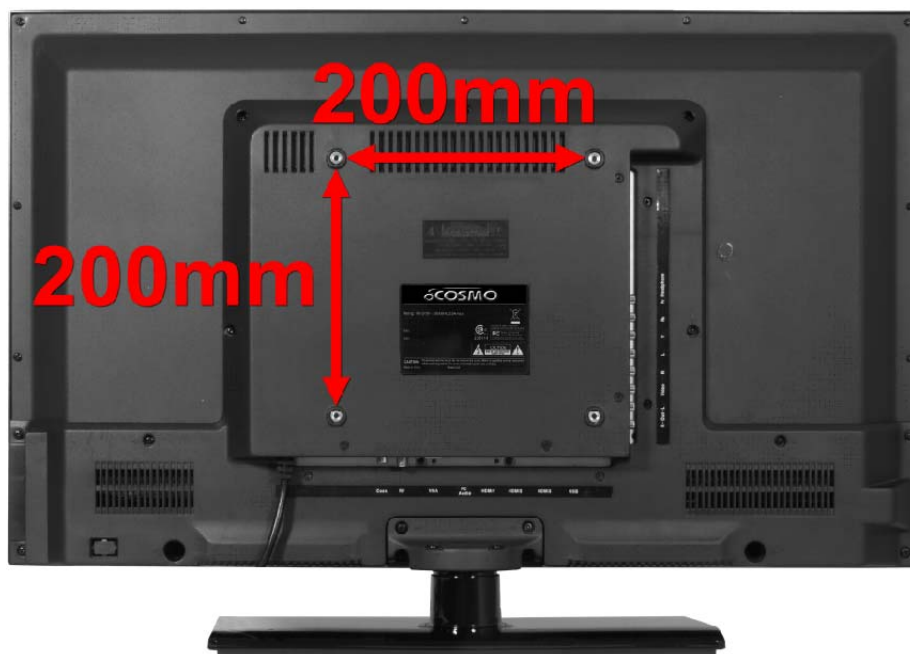 

Mounting Specification: **200mm x 200mm** using screw size **M5**. Length of screw should not exceed **9mm**.
Please Note: The **9mm** length of screw refers to how deep the screw can go inside the mounting holes. When you're buying screws, you should add the original 8mm to the thickness of your mounting plate in order to get the total screw length.

3. Installing Batteries to the Remote

Please insert two AAA batteries into the remote control. Make sure that you match the (+) and (-) symbols on the batteries with the (+) and (-) symbols inside the battery compartment. Afterwards, re-attach the battery cover.




Please note:

- Only use AAA batteries.
- Do not mix new and old batteries. This may result in cracking or leakage that may pose a fire risk or lead to personal injury.
- Inserting the batteries incorrectly may also result in cracking or leakage that may pose a fire risk or lead to personal injury.
- Dispose the batteries in accordance with local laws and regulations.
- Keep the batteries away from children and pets.
- If the remote control is not used for a long time, remove the batteries.
- Keep the remote control away from moisture, sunlight, and high temperatures.

4. Connecting Your Cables

The following picture offers a suggestion for connecting most of your audio video equipment.

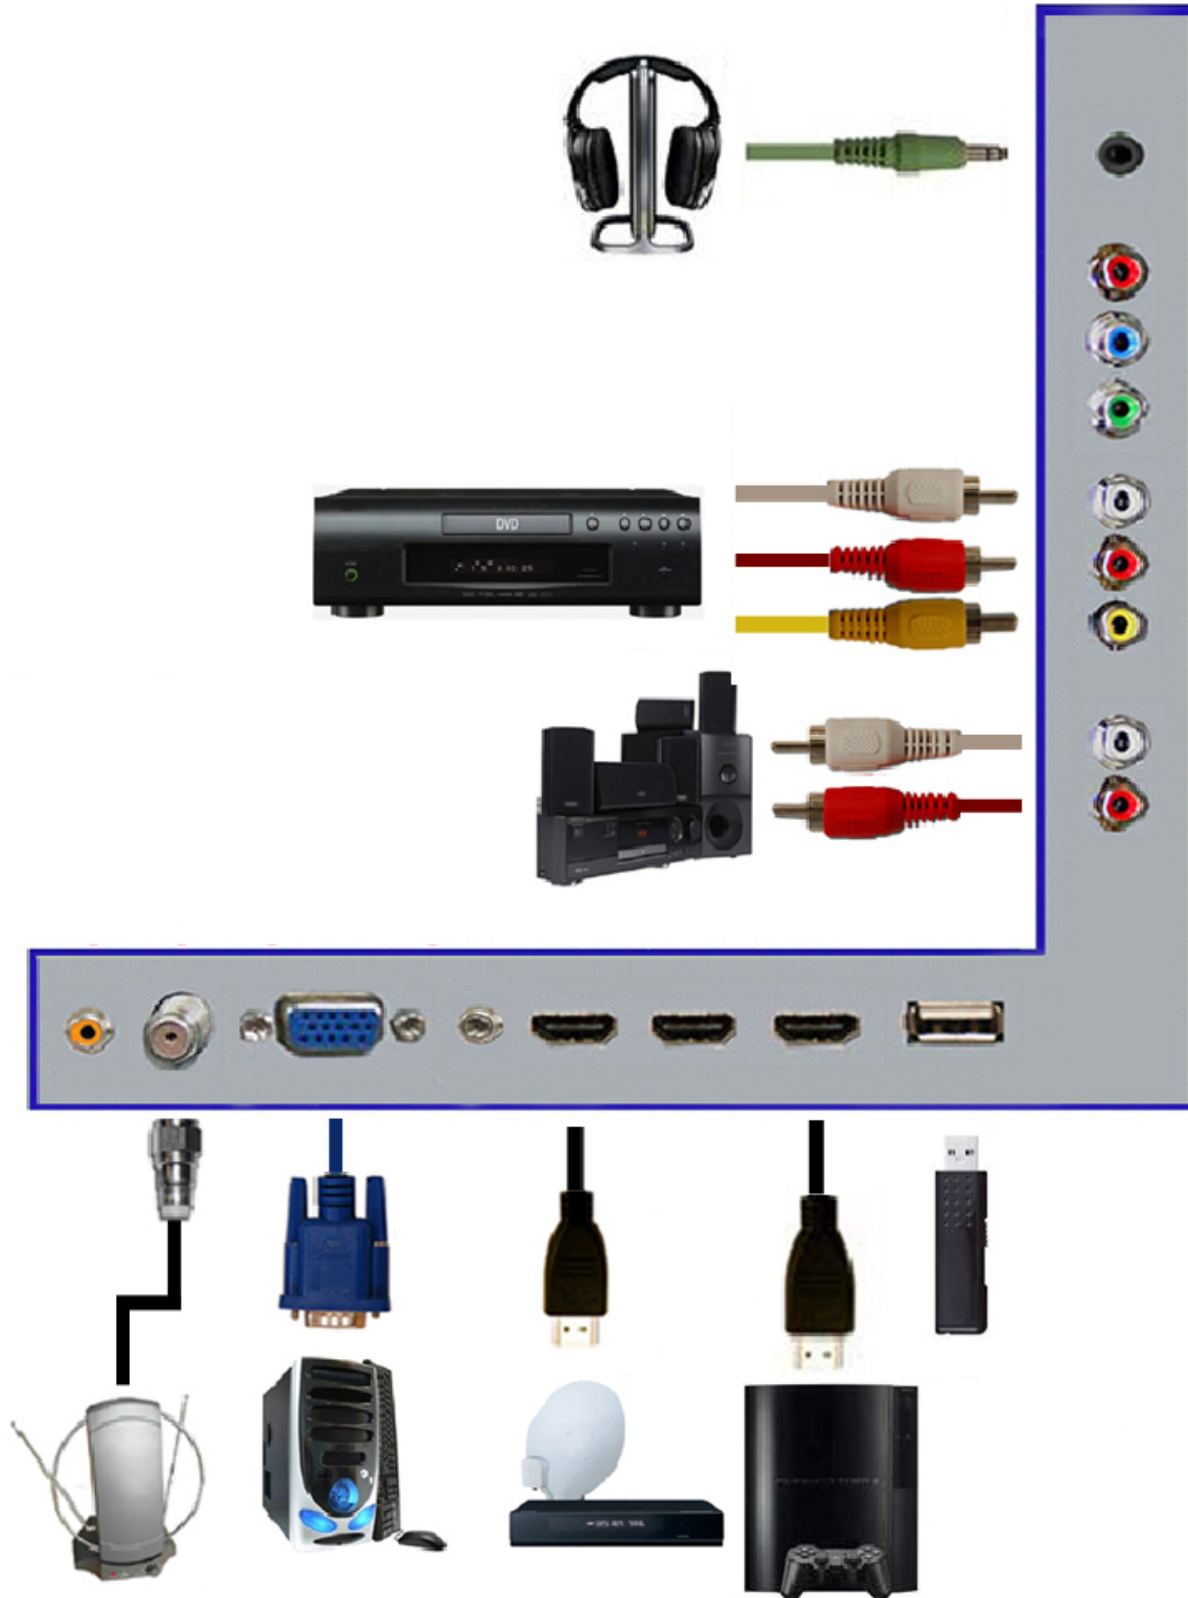 

5. Ready to Watch Some TV?

 
Starting up the HDTV

1. Make sure your power cable is connected and the standby red light in the front of the HDTV is lit up.
2. Check all your connection cables off the side or the back of your HDTV and also your AV devices. Make sure they are all connected securely.
3. Turn on your HDTV and other AV devices if necessary.
4. Select the correct source according to the Connecting pages.


If You've Connected Antenna or Cable to the HDTV...

If an antenna or cable (**without a cable box**) is connected to your TV's tuner, you will need to go through an INITIAL SETUP process in order to watch the HDTV.

1. Press MENU to open the menu

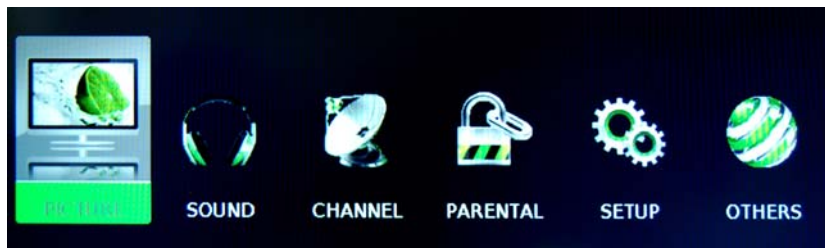

 
2. Use the ◀ or ▶ button to select the CHANNEL icon and press ENTER.

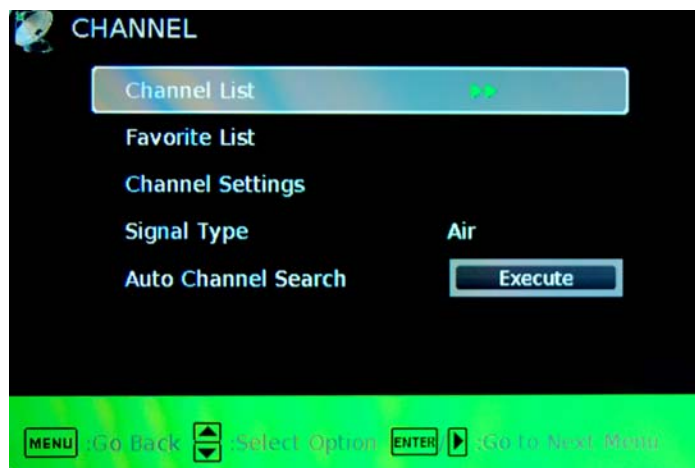

3. Use the ▲ or ▼ buttons to highlight the signal type and press ◀ or ▶ to select your connection either AIR or CABLE.

4. Use the ▲ or ▼ buttons to select AUTO CHANNEL SEARCH and press **ENTER** to scan for channels.
5. Once the scanning finishes, you can begin to watch HDTV.

 If You've Connected set-top boxes to the HDTV...

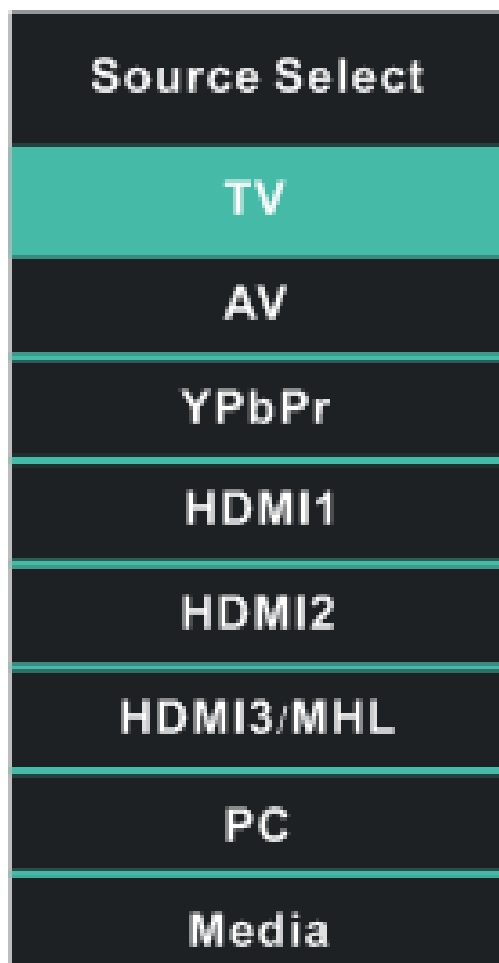

1. Press the S button on top of the HDTV or the SOURCE button on the remote control and you will see the picture above.
2. Use ▲▼ buttons to select the source you want to switch to and press the **ENTER** button in the middle of the ▲▼ buttons.

Please Note :

- Not all broadcasts are in High Definition (HD). Please refer to your local broadcasting stations for more information.
- **The HDTV's tuner is designed for HDTV therefore requires a stronger signal than normal TVs. If you cannot achieve that signal level with your antenna or cable, your HDTV might lose picture or sound.**
- HDMI 3 also doubles as a MHL enabled port, so if you have a cell phone that supports the Mobile High-definition Link, you can purchase a MHL cable and connect it to HDMI 3.